

# *Encore*<sup>™</sup>

*Conical Burr Coffee Grinder*

## *Operations Manual*





*Skilled in the art of grinding*

Operations manuals are available in the following languages at  
**[www.baratza.com](http://www.baratza.com)**

English.pdf    Spanish.pdf

French.pdf    German.pdf

Troubleshooting Guide available at:

[www.baratza.com/troubleshooting/](http://www.baratza.com/troubleshooting/)

*Thank you for purchasing the Encore™ Conical Burr Coffee Grinder. With the Encore™, it's now easier than ever to make professional quality coffee. Below are detailed descriptions of the features that make the Encore™ stand out from other grinders in its class.*

### **Conical burrs**

*The slow rotating conical burrs of the Encore™ preserve the aroma and flavor of the freshly ground beans. Forty steps of adjustment provide the fine tuning needed for Espresso, Drip, and French Press Coffee.*

### **Front mounted pulse button**

*The front-mounted pulse button makes it easy to grind directly into an espresso brew basket. The discharge chute is designed to accommodate any home or commercial espresso brew basket.*

### **Innovative burr calibration system**

*The range of grind and the accuracy of the settings is truly impressive. The Encore™ has 40 distinct settings to enable grinding from to Espresso to French Press. An innovative calibration system allows all the manufacturing tolerances of the grinder to be eliminated, resulting in identical, accurate performance from each grinder.*



## Table of Contents

Introduction .....	1
Table of Contents .....	2
Parts Identification .....	3
Safety Information.....	4
Initial Operation .....	5
Setting the Grind Control .....	6
On/Off Switch .....	7
Front Mounted Pulse Button .....	7
Automatic Cleaning .....	8
Care and Cleaning.....	8
Cleaning the Housing and Hopper .....	8
Cleaning the Burrs .....	9
Remove the Ring Burr .....	9
Cleaning the Ring Burr .....	9
Replacing the Ring Burr .....	10
Replacing the Bean Hopper .....	10
Warranty and Service .....	11
Notes .....	12
Troubleshooting guide: .....	<a href="http://www.baratza.com/troubleshooting/">www.baratza.com/troubleshooting/</a>



# Encore

## Parts Identification



## Safety Information

Please read the information below very carefully. It contains important tips for the use, the safety, the maintenance and care of this appliance. Please keep these operating instructions for future reference.

- Use only with AC current and the correct voltage. See the label on the base of the grinder to determine the correct voltage.
- Only clean the grinder housing with a dry or slightly damp cloth.
- Do not use this grinder for anything other than its intended use (i.e. grinding whole roasted coffee beans).
- Disassemble your grinder only as directed in the Care and Cleaning Section of this manual. If you cannot remedy a malfunction check [www.baratza.com](http://www.baratza.com) and visit our Troubleshooting page. If you need further assistance e-mail us at [support@baratza.com](mailto:support@baratza.com) or call us at 425-641-1245.
- Baratza will not accept any liability for damage or injury if the grinder is used other than for its intended purpose or is improperly operated or repaired. All warranty claims will be void.
- Do not operate the grinder with a damaged cord or plug, or if the grinder malfunctions.
- Do not leave your grinder unattended while turned ON.
- Shut off and unplug the grinder from the electrical outlet when not in use and before cleaning.
- To unplug, grasp plug and remove from the outlet-never pull on cord.
- Keep your grinder out of the reach of children.
- Do not immerse the grinder, plug or cord in water or any other liquid.

### Caution

- **ALWAYS** unplug the electrical supply cord prior to cleaning the grinder.

## Before Using Your Grinder

Prior to using your *Encore*<sup>™</sup> grinder for the first time you should wash the bean hopper and ground coffee bin in warm soapy water. See the section on Care and Cleaning for instruction on how to remove and reinstall these parts. There may be some rust on the burrs when you receive your grinder. This is normal and will disappear after a small amount of coffee has been ground. To remove the rust and season the burrs, grind 1/4 pound of coffee and discard.


## Initial Operation

Place the *Encore*<sup>™</sup> on a level surface and plug into a correct voltage, AC outlet only. Remove the lid from the hopper by lifting off. Pour the desired quantity of roasted whole coffee beans into the hopper up to a maximum of 8 oz. Replace the lid. Ensure the ground coffee bin is fully inserted.



## Setting the Grind Control

Slowly rotate the bean hopper clockwise or counter clockwise to align the indicator on the bean hopper with the desired number setting on the grind scale. Select the correct grind for the brew process you are using. 40 grind settings are available. The settings shown in the table below can be used as a general guideline. The actual grind size for a particular setting will vary depending on many factors, including: degree of roast (light vs. dark), freshness, humidity, type of bean, oil content, etc. With use, you will determine the setting that is right for your taste, brewing style and your favorite beans.

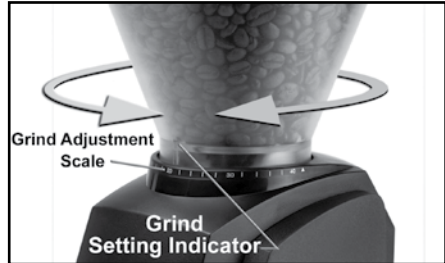

Setting	Type of Coffee	Grind
1 to 14	Espresso	Fine
16 to 28	Filter / Drip	Medium
29 to 40	Press	Coarse

### Note:

Partially ground coffee beans may remain between the burrs after the grinder is turned off, adjusting the grind may be easier when the grinder is running. Avoid running the grinder at very fine settings without beans as it can damage the burrs.



## Manual Switch Operation

You may rotate the On/Off switch clockwise or counter clockwise from any position without damaging it.

The quantity of ground coffee you need depends on the type of bean, coarseness of the grind, brewing method and personal taste.



## Front Mounted Pulse Button



For short duration grinding, the *Encore*<sup>™</sup> is equipped with a front mounted pulse button. It can be used for grinding directly into an espresso-brewing basket. Remove the grounds bin and position the espresso-basket inside the grinder directly below the pulse button (see photo). Push and hold the pulse button to grind. Grinding will stop when the button is released.

### Note

It is important that the espresso basket is held below the discharge chute so the coffee powder can fall freely into the basket. Holding the basket up tight to the discharge chute will cause coffee to back up and jam your grinder.



## Automatic Cleaning

A thorough, fast, and easy CLEANING can be accomplished using Grindz™ grinder cleaner. Grindz™ is a product designed to dislodge coffee particles and absorb and remove odors and coffee oil residue. Simply place one packet of Grindz™ into the empty grinder hopper. Adjust grind setting to 20, and operate as if grinding coffee beans until all of the Grindz™ has been ground. Once complete, we recommend passing about 4 Tbs. of coffee through the grinder to remove any Grindz™ residue. Discard the ground coffee. For additional information on Grindz™ go to [www.urnex.com](http://www.urnex.com).



Grindz™ can be purchased at [www.baratza.com](http://www.baratza.com)

## Care and Cleaning

### Cleaning the Housing and Hoppers



Switch the grinder off and remove the plug from the power supply. Remove any remaining beans from the bean hopper (it may be easiest to tip the grinder over and pour the beans into a bowl). Remove the hopper by twisting it in a counter-clockwise direction as far as it will turn, and then lift the bean hopper from the housing. Wash the hopper, hopper lid, and ground coffee bin in warm soapy water, rinse and dry.

### Caution

Do not put the bean hopper, hopper lid, or ground coffee bin in the dishwasher. Hand wash only. Do not immerse the grinder housing in water.

## Cleaning the Burrs



If the grinder is used daily, the burrs should be cleaned every few weeks. Cleaning enables the burrs to achieve the most consistent grind possible. Cleaning also removes coffee oils, which can degrade the flavor of the ground coffee. Do not wash the burr.

## Remove the Ring Burr



Pull the silicone seal off the top of the ring Burr. Remove the ring burr by lifting it straight up out of the grinder by the lifting tabs. If the burr does not lift out, ensure that the grind adjustment tab is turned fully counterclockwise.

## Cleaning the Ring Burr



Use the bristle brush (included with your grinder) to remove any loose coffee residue on the ring burr and the center cone burr mounted within the motor housing. Wash the silicone seal in warm soapy water and dry.

## Replacing the Ring Burr



Ensure that the black adjustment ring is rotated counterclockwise as far as it will go. Replace the burr by lining up the red tab on the burr with the rectangular cutout on the black adjustment ring. Wiggle and push down firmly on the ring burr to ensure that it seats properly.



After replacing the burr, replace the silicone seal by lining up the two slots in the silicone seal with the small tabs on the top of the ring burr and slide the seal onto the ring burr.

## Replacing the Bean Hopper



To replace the bean hopper, line up the two tabs on the base of the hopper (with the small tab on the right side) with their respective slots in the top of the grinder housing and insert the hopper into the grinder. Once the hopper is in place rotate it clockwise to your desired grind setting.

## **Warranty and Service**

### **U.S. and Canadian Warranty Information**

Limited Warranty for Baratza Grinders is 1 year.

This warranty covers all defects in materials or workmanship (parts and labor) including free ground transportation to and from our repair facility within US and Canada. This warranty does not apply to: improper use, lack of cleaning, abuse, normal wear and tear, lack of proper adjustment, foreign objects (stones, screws, etc) in the beans, or uses outside the intended use of grinding whole roasted coffee beans.

If your grinder fails within one year, e-mail [support@baratza.com](mailto:support@baratza.com) or call 425-641-1245. If the problem cannot be solved over the phone and the problem is determined to be a warranty issue, then Baratza will deliver an identical or comparable replacement to your door, free of charge and arrange to have your “failed” grinder returned to us. When you receive your replacement grinder, use the carton and packing material and shipping label to return your “failed” grinder by dropping it off at any UPS pickup locations. If the grinder is outside US or Canada the customer is responsible for the shipping of the grinder for repair.

### **International Warranty Information**

Go to: [www.baratza.com](http://www.baratza.com) for warranty information on grinders sold outside the United States.

### **Proof of Purchase and Product Registration**

You can register your grinder at [www.baratza.com](http://www.baratza.com). Registration will enable us to contact you in the unlikely event of a product safety notification and assist us in complying with the provisions of the Consumer Product Safety Act. The serial number is located on the bottom of the grinder. Please keep your sales receipt that shows the date of purchase.

**For repairs or parts**  
e-mail: [support@baratza.com](mailto:support@baratza.com)  
**Parts:** [www.baratza.com](http://www.baratza.com)  
425-641-1245



## Notes

© 2012  
Baratza, LLC  
3923-120th Ave. S.E.  
Bellevue, WA. 98006  
[www.baratza.com](http://www.baratza.com)



rev. 011512